## α-Axis, Micrometer Head ➤

Cross Roller


## Goniometer Stages




 The cross guide rail and differential head may rust during installation and use. Please pay attention to taking rust prevention measures.
The cross roller guide rail has weak impact resistance. If it dropped or too much force is applied to it, abnormal sliding will occur. Please pay full attention when using it






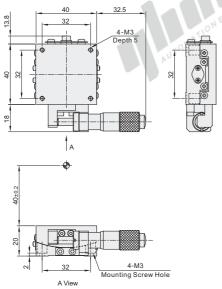


No.: 40 Center Height(mm): 60

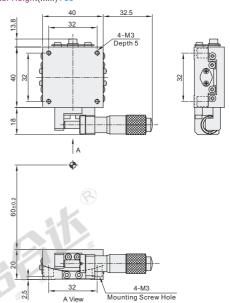

No.: 60 Center Height(mm): 50

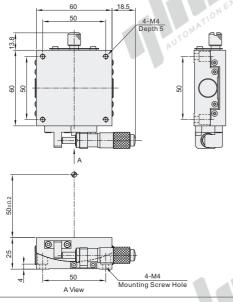

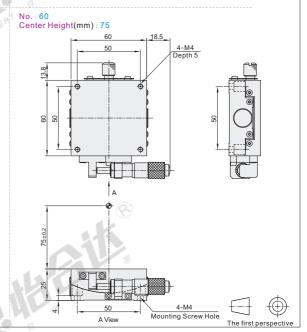

Part Number		Center Height (mm)	Stage Surface (mm)	Travel Distance	Min. Reading ("/division)	Load Capacity	
Code	No.	(111111)	(IIIII)			(kgf)	(kg)
ELK51	40	40	40×40	±7°	≈45	3	0.13
		60		±6°	≈35		
	60	50	60×60	±6°	≈35	5	0.29
		75 AU		±4°	≈25		



P	art Numb	Stage Surface		
Code	No.	Center Height	(mm)	
ELK5D	40	40 (60)	40×40	
FLIZEA	40 /	20		





