



Lifting Eye Bolts

Code	Type	Material		Surface Treatment	Accessories
		GB	Equiv.		
TBF01	Lifting Eye Bolts	Q235	SS400	Zinc-plated	Nut 1 pc.
TBF02		0Cr18Ni9	SUS304	—	

Applicable standards of this product: DIN 580-2010

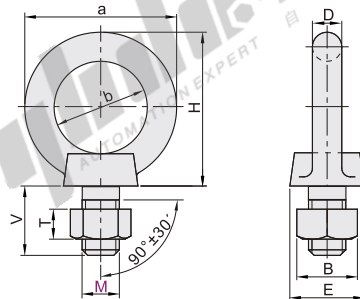

The first perspective

Part Number		Load (T)	P Pitch	a		b		D		E		H		V	Nut		
Code	M			TBF01	TBF02	TBF01	TBF02	TBF01	TBF02	TBF01	TBF02	TBF01	TBF02		B	T	
TBF01 TBF02	6	0.14	1	36.3	28	19.7	15.7	8.3	6.3	20.3	15.3	37.5	28	13	10	5	
	8		1.25	36.3	36.3	19.7	19.7	9.3	9.3	20.3	20.3	37.5	37.5	13	13	6.5	
	10	0.23	1.5	45.3	45.3	24.7	24.7	10.3	10.3	25.3	25.3	46.5	46.5	17	17	8	
	12	0.34	1.75	54.3	54.3	29.7	29.7	12.3	12.3	30.3	30.3	55	55	20.5	19	10	
	14*	0.49	2	63	—	35	—	14	—	35	—	62	—	27	21	14	
	16	0.7		63.3	63.3	34.7	34.7	12.5	12.5	35.3	35.3	64.5	64.5	27	24	13	
	20	1.2	2.5	72.3	72.3	39.7	39.7	16.3	16.3	40.3	40.3	71	71	30	30	17	

The spec with * does not apply to TBF02.



Please order as shown

Part Number	M
Code	M
TBF01	8
TBF02	10
	12

TBF01 — M8



Discount price	
Per	1~49 50~
Price	100% Additional quotation



Delivery	
	8




Example


Installation method: Gently fasten the screw with hanging ring by hand when installing, to keep the supporting surface of the screw with hanging ring flat and close to the workpiece plane.

Correct hanging installation method

1. Straight hanging

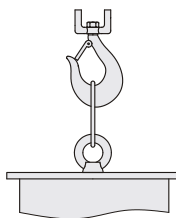


2. 45° hanging

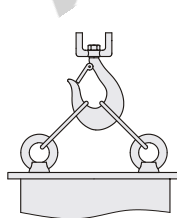

Wrong hanging installation method

1. Horizontal hanging

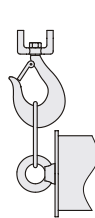

2. Use a wire rope to suspend two screws with hanging ring

